


# Typical application

**NOTE**  
Consult the user manual for wiring diagram details. The information in this brochure is subject to change without notice.

**NOTE 2**  
NFPA-20 Mode:  
JM5-6 Open

**NOTE 3**  
Engine protection  
Mode: Terminal JM5-JM6  
connected together

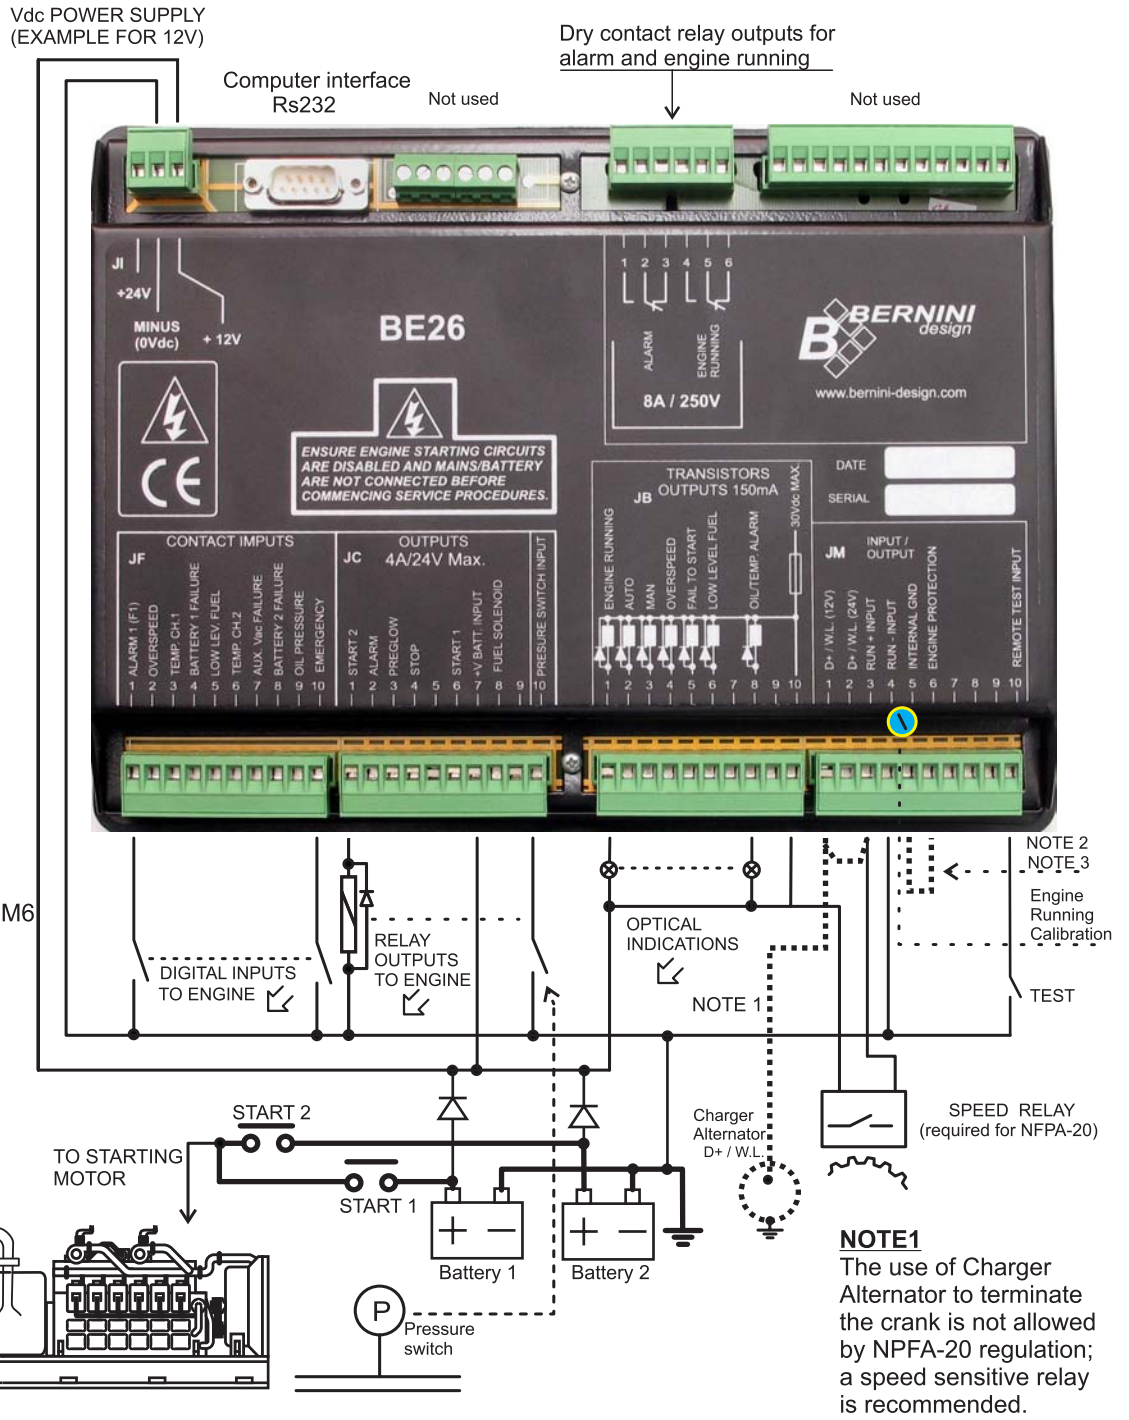

## Dimensions

